



Drill a 6mm or larger hole right above the pivot point of the swing- arm.
 Take a pin punch with a flat tip and punch the locking wire into the groove
 of the gearbox about every 1/2" around it's diameter. To rotate the gearbox
 all the way around , the pin that is used to turn the gearbox to the different
 patterns , must be removed (the pin is just pressed in).

		Dwg. Nr.:
Name: Gearbox Removal (with snap ring)		Doc. No.: Ind.:
		Person: Jim Monegan
Scale	General Tolerance	The copying, distribution and utilization of this document as well as the communication of its contents to others without expressed authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or ornamental design registration.
		Julius Blum Inc. Furniture Fittings Mfg. 7733 Old Plank Road Stanley, NC 28164 Phone: (704)827-1345 Fax: (704)827-0799 E-mail: info@blum.com http://www.blum.com